

INSTRUCTION FOR USE OF EXPOSURE INDICATOR CARD

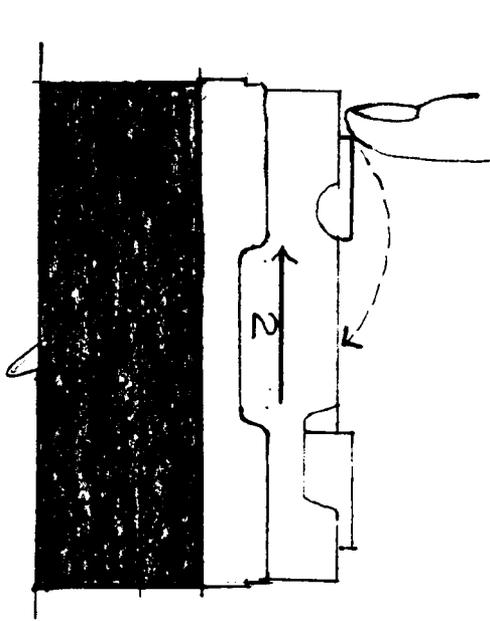


FIG. I
(Looking from the back of a camera)

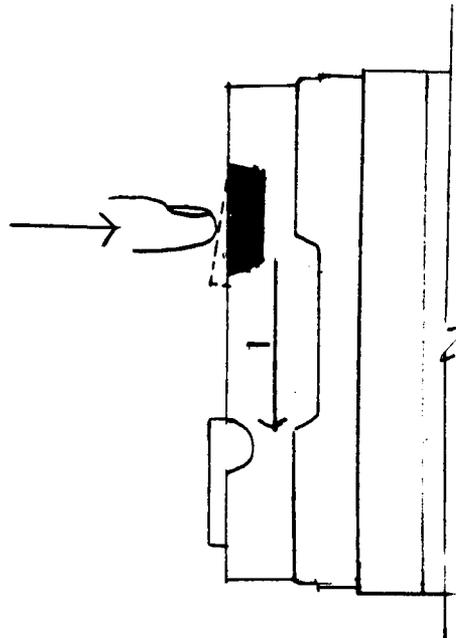


FIG. II
(Looking from the front of
the camera after the card
was rotated 90 degrees)
* Notice the black portion
of the card at the cut-out.

STEP I

After SIDE 1 is exposed rotate the card 90 degrees by pushing down the corner of the card.

STEP 2

To reposition the card, push the card at the half moon cut-out. The corner of the card will slightly pop out as shown by dotted line in FIG.II. Rotate the card back up to the original position.

SUGGESTIONS

Paint a portion of the the card BLACK with permanent marker or write "EXPOSED" as shown in FIG.III.

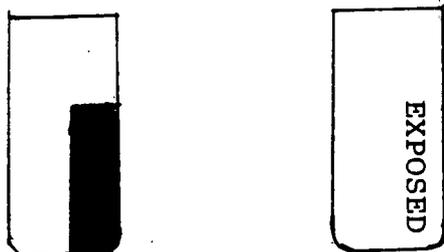


FIG. III