

## BATTERIES AND POWER

### Batteries

For operation of the X-700's circuitry and shutter, use one of the following types of batteries:

- Two 1.55v silver-oxide (SR44; Eveready S-76, EPX-76, or equiv.)
- Two 1.5v alkaline-manganese (LR44; Eveready A-76 or equiv.)
- One 3v lithium (CR-1/3N)—See note on p. 15.


### CAUTIONS

- Never use 1.35v mercury batteries (MR44; Eveready EPX-675 or equiv.), which have a similar shape and size.
- To avoid battery leakage or bursting, do not mix batteries of different types, brands, or ages.
- Used batteries should not be disposed of in fire.

**WARNING:** Keep batteries away from young children.



1. Unscrew counterclockwise and remove the battery-chamber cover on the camera bottom.

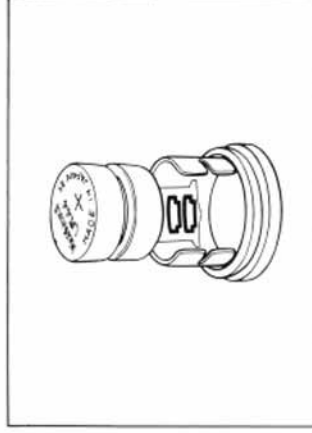

2. After wiping the terminals with a clean, dry cloth, hold the batteries by their edges and insert them plus (+) side out into the sleeve on the inside of the cover.