


## ■ Focusing plate replacement procedure

■ For view finder cleaning without camera disassembly or focusing plate replacement follow the procedure given below.

### ■ Removal

Insert the tweezers between the focusing plate and focusing plate holder A. Slightly tilt the tweezers to raise the focusing plate for removal.


■ Fig. 1

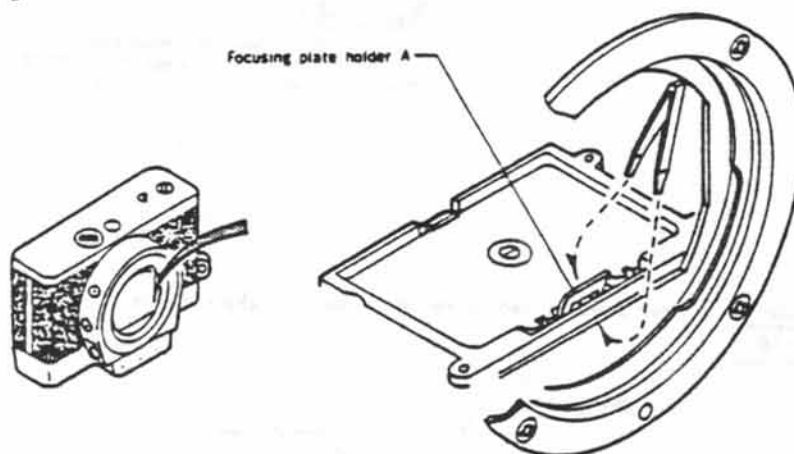

### ■ Mounting

Hold the focusing plate as illustrated; fit part (A) onto the bend of focusing plate holder B; press down arrow-marked part (B); and insert projection (C) into the hold of focusing plate holder A.

■ Fig. 2

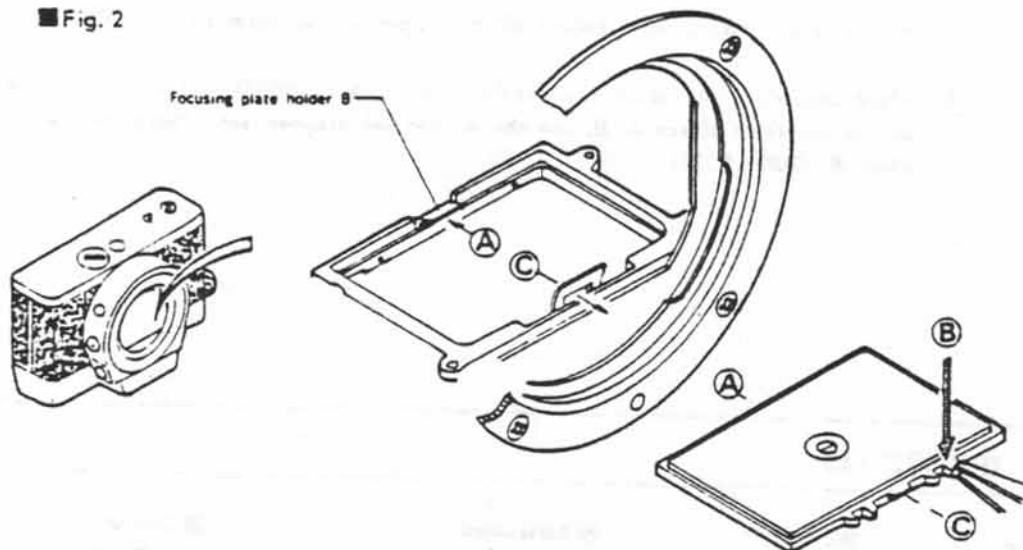

### ■ Mounting check

After mounting the focusing plate, check that the view finder back and EE level are correctly positioned.